



Read Me First

500–1400 VA UPS Internal Battery Connection Instructions

In compliance with a voluntary program accepted by the US Department of Transportation (DOT) to ensure safer air transportation, all uninterruptible power supplies (UPSs) are shipped with the batteries disconnected.

Use the following procedure to ensure proper battery operation before installing the UPS:

- 1 Verify that the UPS is off and unplugged.
 - 2 Remove the UPS front panel.
 - 3 Slide up and remove the metal battery cover.
 - 4 Remove the protective label from the internal battery connector.
 - 5 Connect the red wire to the (+) battery connector.
- NOTE:** A small amount of arcing may occur when connecting the batteries. This is normal and does not damage the unit or present any safety concern.
- 6 Reinstall the metal battery cover.
 - 7 Reinstall the UPS front panel.
 - 8 Refer to the user's guide for UPS installation instructions.

If the UPS requires any type of transportation in the future, disconnect the UPS internal battery connector using the above steps in reverse order. If you need additional assistance, contact your service representative or the appropriate telephone number on the service label of the UPS.

